







Friend 004, 006, & 008

Quick Reference User Manual

 <p>Cable TV</p>	<ul style="list-style-type: none"> • Turn system on by touching the logo screen “Touch Screen to Begin.” • From the Main Menu, select Lighting and adjust the room lighting by selecting the appropriate lighting preset. • From the Main Menu select Presentation Sources. • Select Cable TV from the Presentation Sources Menu. • Enter the desired channel number to be viewed. • The source will automatically be displayed on the touch panel preview window. • To display the Cable TV on the projector, press the “Display on Projector” button. If the projector is currently on, the Cable TV will be routed to the projector and audio will be heard from the room speakers. If the projector is currently off, a password page will be displayed and you must enter the password to turn the projector on. The password can be obtained from your System Administrator. • Adjust the volume by selecting Volume and then selecting the desired volume control button.
 <p>VCR</p>	<ul style="list-style-type: none"> • Turn system on by touching the logo screen “Touch Screen to Begin.” • From the Main Menu, select Lighting and adjust the room lighting by selecting the appropriate lighting preset. • Load the desired VHS Tape. • From the Main Menu select Presentation Sources. • Select VCR from the Presentations Sources Menu and press PLAY. • The source will automatically be displayed to the touch panel preview window. • To display the VCR on the projector, press the “Display on Projector” button. If the projector is currently on, the VCR will be routed to the projector and audio will be heard from the room speakers. If the projector is currently off, a password page will be displayed and you must enter the password to turn the projector on. The password can be obtained from your System Administrator.
 <p>DVD Player</p>	<ul style="list-style-type: none"> • Turn system on by touching the logo screen “Touch Screen to Begin.” • From the Main Menu, select Lighting and adjust the room lighting by selecting the appropriate lighting preset. • Load the desired DVD into the player. • From the Main Menu select Presentation Sources. • Select DVD from the Presentations Sources Menu and press PLAY. • The source will automatically be displayed on the touch panel preview window. • To display the DVD on the projector, press the “Display on Projector” button. If the projector is currently on, the DVD will be routed to the projector and audio will be heard from the room speakers. If the projector is currently off, a password page will be displayed and you must enter the password to turn the projector on. The password can be obtained from your System Administrator. • Adjust the volume by selecting Volume and then selecting the desired volume control button.

Large Classrooms

Quick Reference User Manual

 <p>Laptop</p>	<ul style="list-style-type: none"> • Turn system on by touching the logo screen “Touch Screen to Begin.” • From the Main Menu, select Lighting and adjust the room lighting by selecting the appropriate lighting preset. • Return to the Main Menu and select Presentation Sources. • Select Laptop from the Presentation Sources Menu. • Please note that due to system limitations, the laptop will NOT be displayed on the touch panel preview window. • To display the Laptop on the projector, press the “Display on Projector” button. If the projector is currently on, the Laptop will be routed to the projector and audio will be heard from the room speakers. If the projector is currently off, a password page will be displayed and you must enter the password to turn the projector on. The password can be obtained from your System Administrator. • Adjust the volume by selecting Volume and then selecting the desired volume control button.
 <p>Audio Cassette</p>	<ul style="list-style-type: none"> • Turn system on by touching the logo screen “Touch Screen to Begin.” • Load the desired Audio Cassette Tape. • From the Main Menu select Presentation Sources. • Select Audio Cassette from the Presentations Sources Menu. • To hear the Audio Cassette in the room, select PLAY. • Adjust the volume by selecting Volume and then selecting the desired volume control button.
 <p>CD Player</p>	<ul style="list-style-type: none"> • Turn system on by touching the logo screen “Touch Screen to Begin.” • Load the desired CD into the player. • From the Main Menu select Presentation Sources. • Select CD from the Presentations Sources Menu. • To hear the CD in the room, select PLAY. • Adjust the volume by selecting Volume and then selecting the desired volume control button.